

# DVMS Remote Access Setup Utility



How to connect your Server NVR on multiple computers remotely (WAN) and locally (LAN) using DVMS Remote Access Setup.

## Step 1: Gathering Server configurations

1. Open **Intersys Management** from the local server recorder



2. Click on “Change Recorder Addresses” under System Settings

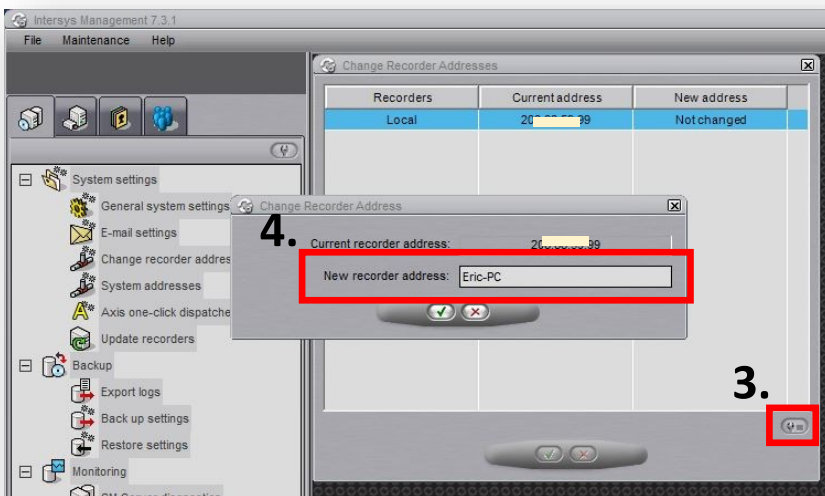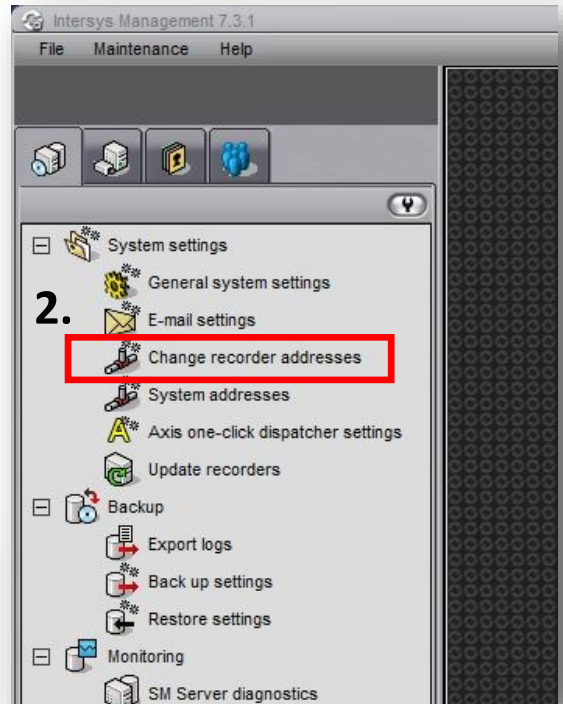

3. Select your Local recorder and press the “Change Recorder Address” button





4. Highlight and copy the provided “New Recorder Address”



5. Close all floating menus and close the Intersys Management software.

# Exporting DVMS for remote computer (WAN)

1. On the local server, open “DVMS Remote Access Setup Utility”
2. Press the NVR Tab

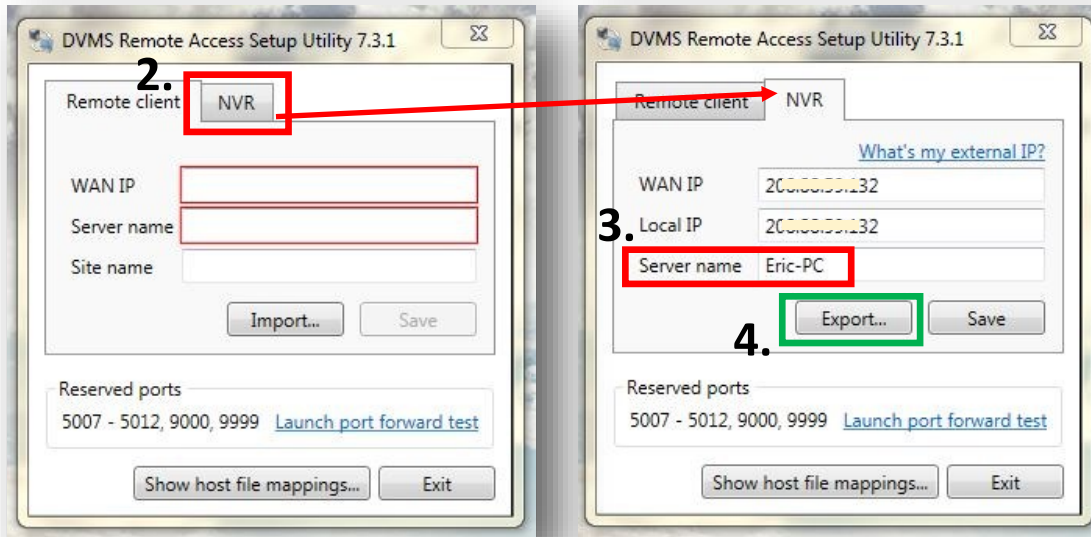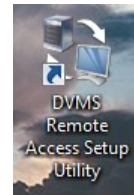

3. Type or paste in the Server name and press Save
4. Press the Export button to export the site's configurations

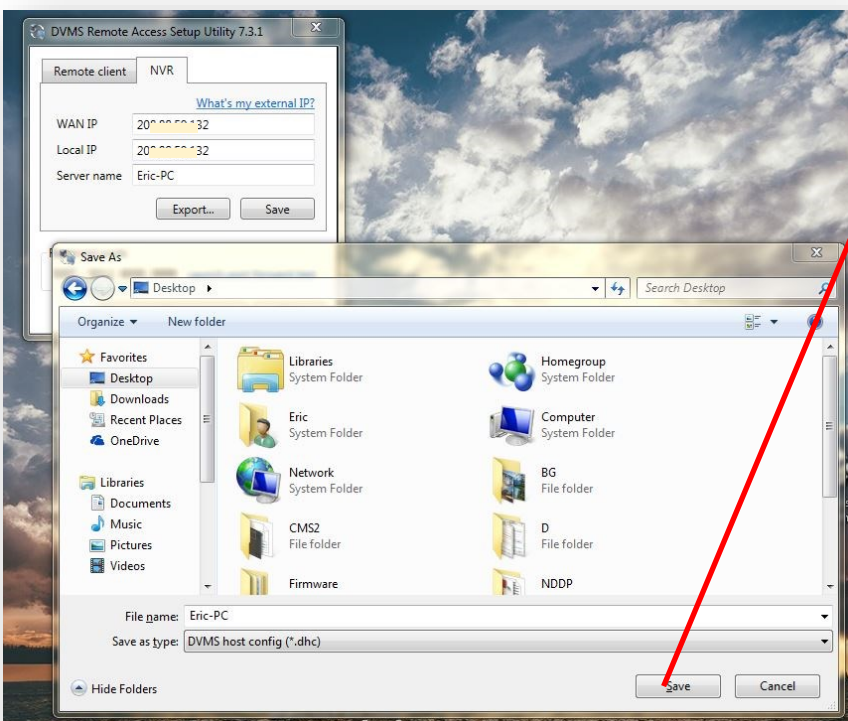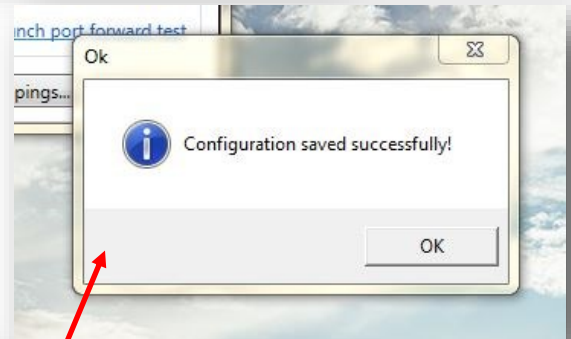

5. DVMS host config (.dhc) file will be created.


**Eric-PC.dhc file**



*\*This will be the file that you will import to each remote/local computer.*

## Importing DVMS Host Config (.dhc) file on remote (WAN) computer





1. Open up a web browser and go to the site [www.nuvico.com](http://www.nuvico.com)
2. Download the Intersys Client: [Intersys Client 7 3 1.zip](#)
3. Once Intersys Client is fully installed, open up the exported **.dhc** file  
eg. **Eric-PC.dhc**

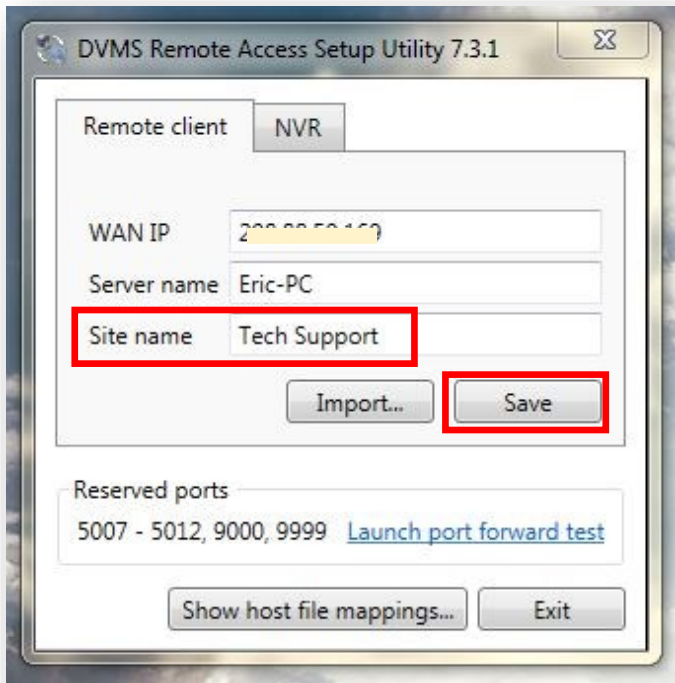

4. Under **Remote Client** Tab, WAN IP and Server name information should be already filled.

- At the Site Name column, you can name it whatever you'd like then press Save and Exit.



5. When opening Intersys Client, it will automatically copy over your site's credentials.

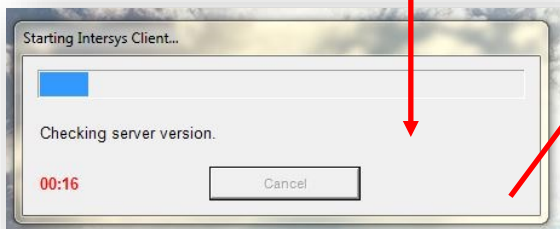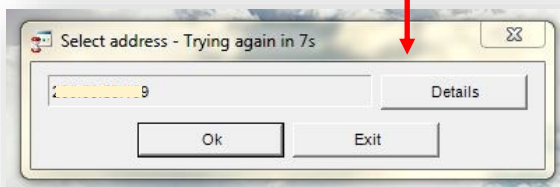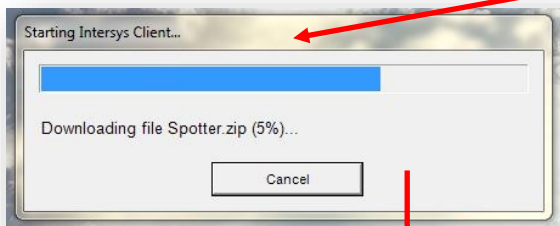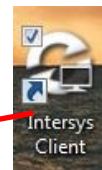



Log In to your assigned username and password

# Exporting DVMS for Local computer (LAN)

1. On the local server, open “DVMS Remote Access Setup Utility”
2. Press the NVR Tab

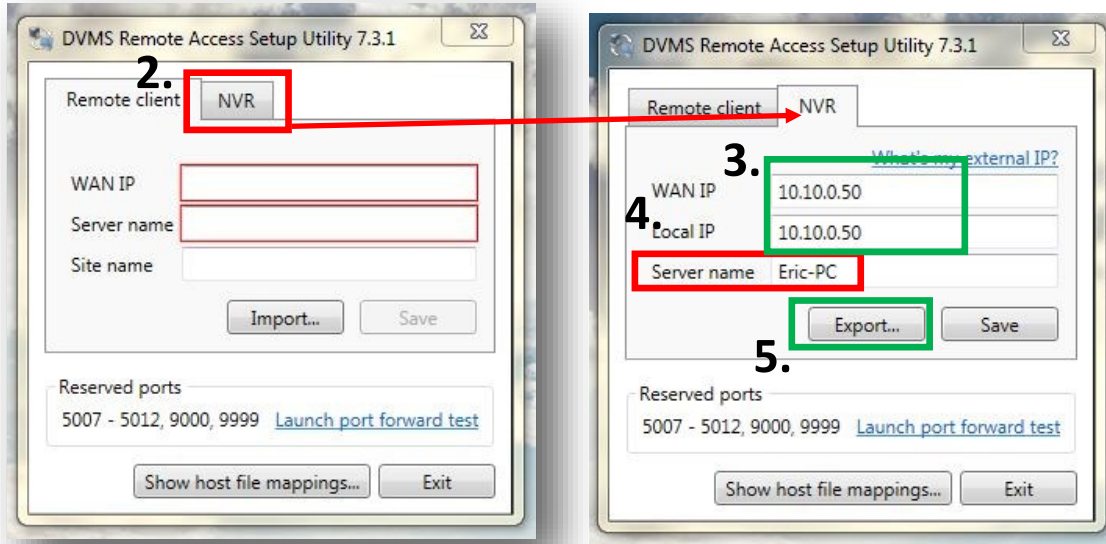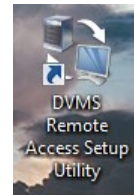

3. Copy the Local IP address to the WAN IP field.
4. Type or paste in the Server name and press Save
5. Press the Export button to export the site's configurations

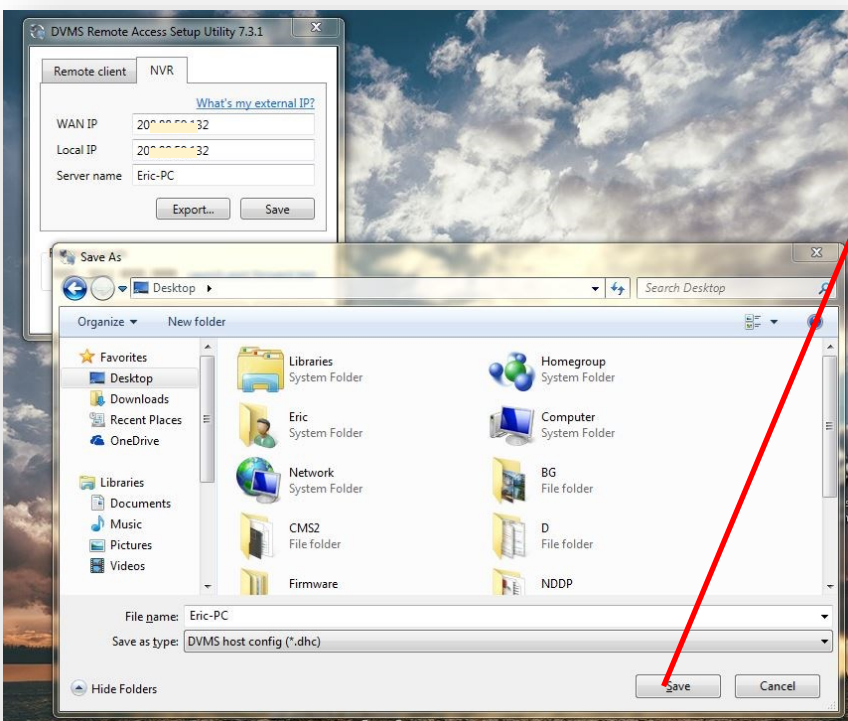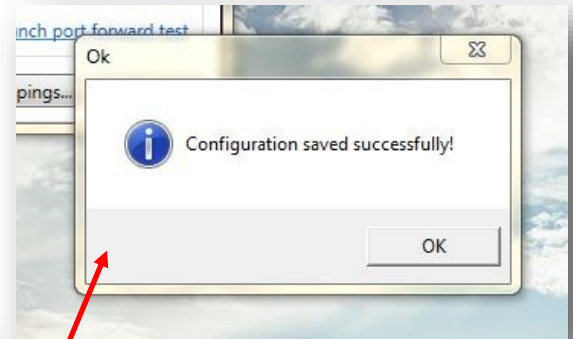

6. DVMS host config (.dhc) file will be created.


**Eric-PC.dhc file**



*\*This will be the file that you will import to each remote/local computer.*

## Importing DVMS Host Config (.dhc) file on a local (LAN) computer

1. Open up a web browser and go to the site [www.nuvico.com](http://www.nuvico.com)
2. Download the Intersys Client: [Intersys Client 7 3 1.zip](#)
3. Once Intersys Client is fully installed, open up the exported **.dhc** file  
eg. **Eric-PC.dhc**

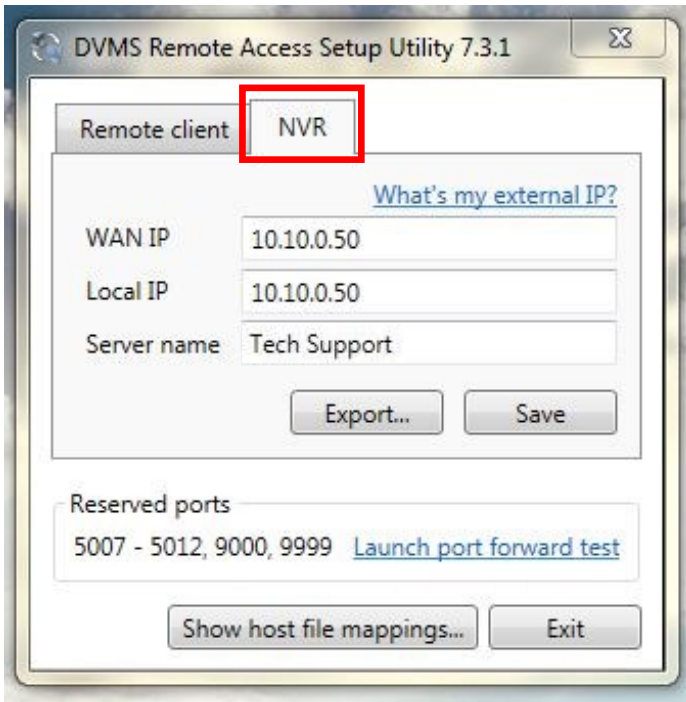

4. Under **NVR** Tab, the WAN IP and the local IP address should be the same.

- *Server Name can be changed to any name*

5. When opening Intersys Client, it will automatically copy over your site's credentials.



Log In to your assigned username and password