


NCT-4M-B2 Bullet Camera Quick Start Guide

1.Package

After you receive your device, please check the following accessories.
The pictures here are for reference only.

Camera	Quick Start Guide	CD	Drill Template	Screws	Water-proof Cap


2.Overview

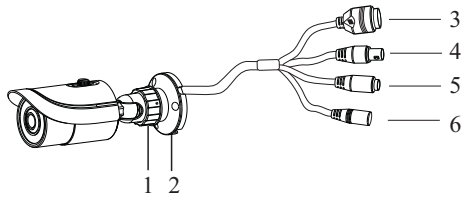


1	Fixed Ring	4	CVBS Cable
2	Mounting Base	5	MIC IN Cable
3	Network Cable	6	Power Cable

1


► Network Cable Connection

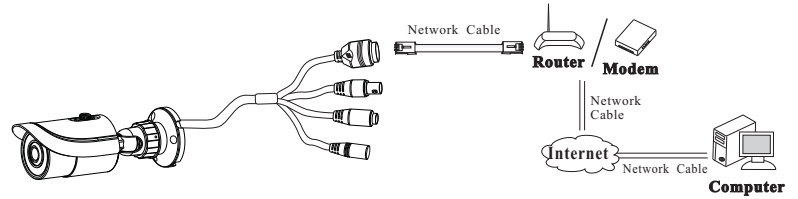

► Water-proof Cap Mounting

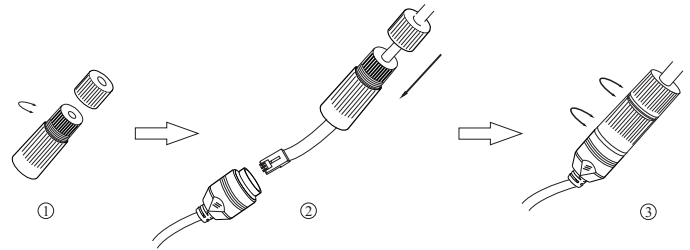


► Video Connection

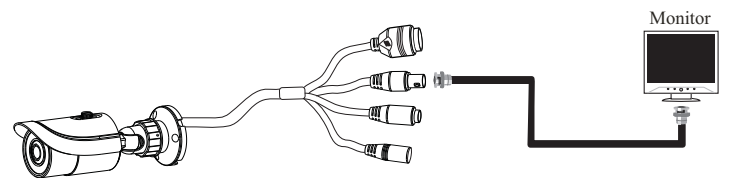


2

► Audio Connection

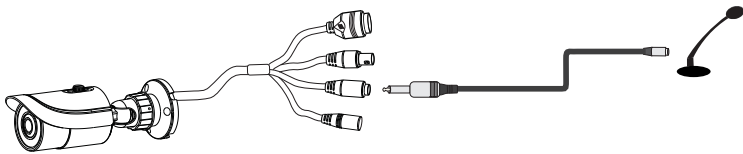


► Power Connection

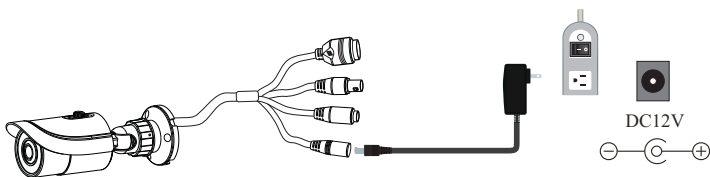

3. Installation

Please make sure that the wall or ceiling is strong enough to withstand 3 times the weight of the camera. Please install and use the camera in the dry environment. You'd better install back the lens cover less than 4 hours after removing it.

 
① Drill the screw holes and the cable hole on the wall according to the drill template.




3

② Route the cables and connect the relevant cable.

③ Secure the mounting base with camera to the wall with screws.

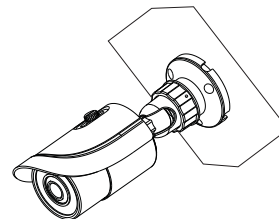


④ Bracket adjustment. Before adjustment, preview the image of the camera on a monitor and then loosen the fixed ring to adjust the view angle of the camera.

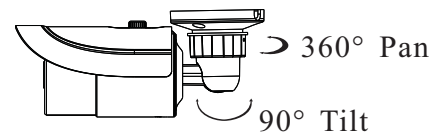

⑤ Focus and zoom adjustment (If the model you get is fixed lens, please skip this step). Remove the lens cover and then adjust the focus and zoom screws to get a clear image. Finally, tighten these two screws and the lens cover.

4

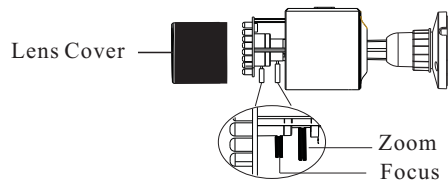


- ⑥ Remove the protection film softly to finish the installation.

4. IE Network Connection

Here we take accessing IP camera via LAN for example. In LAN, there are two ways to access. 1. Access through Xcel IP Utility; 2. Directly Access through IE Browser


► Access the camera through Xcel IP Utility

- ① Make sure that the camera and the PC are well connected to the LAN.
- ② Find the Xcel IP Utility from the CD and then install it in the computer. After that, run the Xcel IP Utility as shown below.

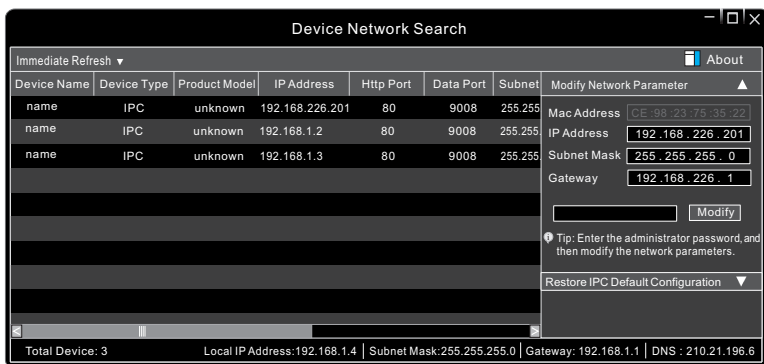

5

- ③ Modify the IP address. The default IP address of this camera is 192.168.226.201. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your device according to the practical situation.

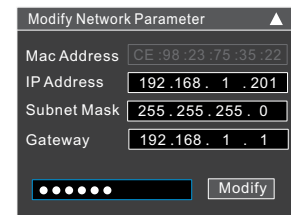

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X. After modification, please input the password of the administrator and click “Modify” button to modify the setting.

⚠ The default password of the administrator is “123456”.

- ④ Double-click the IP address and then the system will pop up the IE browser to connect IP-CAM. IE browser will automatically download the Active X control. After downloading, a login window will pop up. Input the user name and password to login.

⚠ The default username is *admin*; the default password is 123456.

6


► Directly Access Through IE

The default network settings are as shown below:

IP address: 192.168.226.201 HTTP:80
Subnet Mask: 255.255.255.0 Data Port:9008
Gateway: 192.168.226.1


You may use the above default settings when you log in the camera for the first time.

- ① Set the IP address of the PC and make sure the network segment should be as the same as the default settings of IP-CAM. Open the network and share center. Click “Local Area Connection” to pop up the following window.

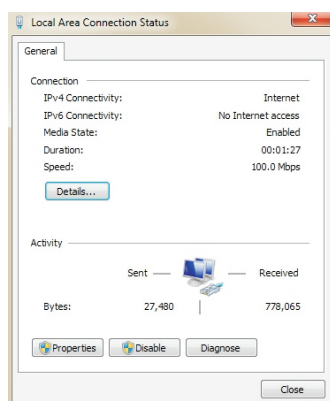

7

Select “Properties” and then select Internet protocol according to the actual situation (for example: IPv4). Next, click “Properties” button to set the network of the PC.

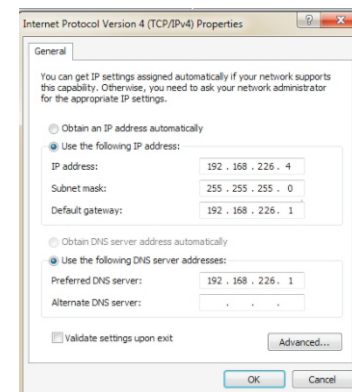

- ② Open the IE Browser and input the default address of IP-CAM and confirm. The IE browser will download Active X control automatically.
- ③ After downloading Active X control, the login dialog box will pop up.
- ④ Input the default username and password and then enter to view.

8