



5. Three-axis adjustment. Before adjustment, preview the image of the camera on a monitor and then adjust the camera according to the figure below to get an optimum angle.

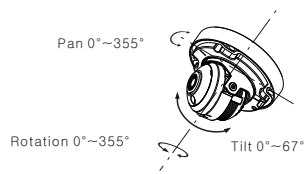


6. Install the lower dome back to the camera and secure it with the screws as shown on the below left (For the camera with the trim ring, after installing back the lower dome, please put the trim ring onto the lower dome and rotate it clockwise until it is locked as shown on the below right). Finally, remove the protection film to finish the installation.

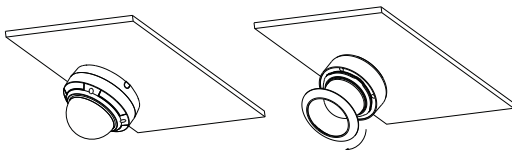


● Type B


1. Loosen the screws to open the lower dome and then loosen the lock screw to remove the mounting base.
2. Attach the drill template to the place where you want to fix the camera and then drill 4 screw holes and 1 cable hole (if you want to route the cables through the mounting base) according to the drill template.

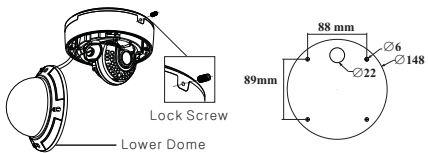

3. Route and connect the cables. And then secure the mounting base to the ceiling or wall with screws.

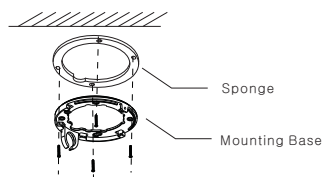


4. Fix the camera to the mounting base with the lock screw.

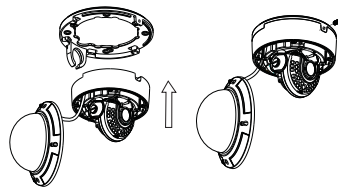


5. Three-axis adjustment. Before adjustment, preview the image of the camera on a monitor and then adjust the camera according to the figure below to get an optimum angle.

6. Adjust the Focus and Zoom screw to get a clear image (if your camera is fixed lens or motorized lens, please skip this step).

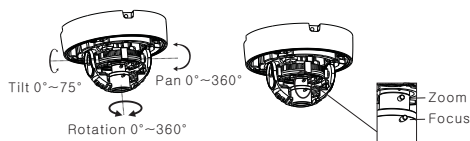


7. Install the lower dome back to the camera with the screws and remove the protection film softly to complete the installation.

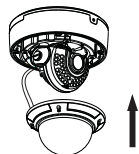


● Type C

1. Attach the drill template to the place where you want to fix the camera and then drill screw holes according to the drill template.
2. Route and connect the cables.
3. Secure the camera to the wall with the screws provided as shown below.

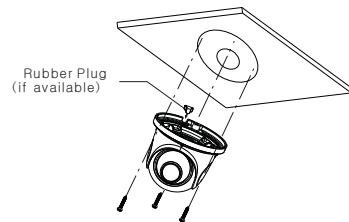

4. Adjust the camera to obtain an optimum angle by loosening the fixed screw. Before adjustment, preview the image of the camera on a monitor. Tighten the fixed screw after you finish adjusting the view angle of the camera.

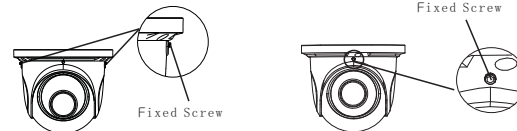

* For some cameras, the fixed screws are on the both side as shown on the above left. For some cameras, the fixed screw is in the middle of the housing as shown on the above right.

* If your camera has no the above-mentioned fixed screw(s), please directly rotate the dome to adjust the view angle.


5. Adjust the Focus and Zoom screw to get a clear image (if your camera is fixed lens or motorized lens, please skip this step).



*For some cameras, you shall open the cover of the dome and then adjust the Focus and Zoom lever as shown on the above right. After that, install the cover back.

● Type D


1. Attach the drill template to the place where you want to fix the camera and then drill screw holes according to the drill template.
2. Remove the mounting base of the camera.

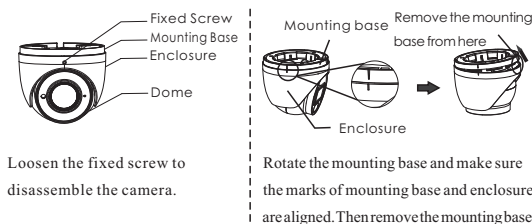

Loosen the fixed screw to disassemble the camera.


Rotate the mounting base and make sure the marks of mounting base and enclosure are aligned. Then remove the mounting base.

 3. Route and connect the cables. Then secure the mounting base to the ceiling or wall with the screws provided.



4. Install the dome and enclosure to the mounting base and then adjust the dome to obtain an optimum view angle.

 5. Adjust the Focus and Zoom screw to get a clear image (if your camera is fixed lens or motorized lens, please skip this step).



Call up Main Menu


* Some models may not support calling up main menu, please take the final product as the standard.

● Access Main Menu

- a. Press Enter key of the rear panel or cable of the camera to go to the main menu.
- b. Select the preview window and right click the mouse to show the following menu list on the DVR.



Click on the toolbar at the bottom of the live preview window (or right click the mouse to select "PTZ Control").

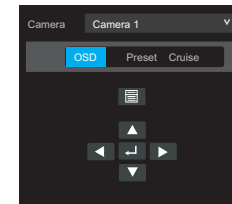

Select the "OSD" tab and then click / to call up the main menu.

● Menu Operation

You can select the menu by clicking (U) or (D) key on the direction area. Click (L) or (R) key to select the menu on the left. The menu with arrow icon which means it has sub-menu. Click / to go to the sub-menu or confirm the settings.

If there are direction keys and enter key on the cables of the camera, you can also use these direction keys to select menu and the enter key to go to the sub-menu or confirm the settings.

Note: This series of the camera must be connected to the DVR which supports calling up main menu of camera. Different DVRs manufactured by different DVR manufacturers may have different modes of menu operation. Please refer to the relevant User Manual of DVR.