



**30x Full-HD IR PTZ DOME
HD-TVI CAMERA**

CT-2M-P30FHIR

INSTRUCTION MANUAL


Please read this guide thoroughly before use and keep it handy for future reference.

“Nuvico surveillance equipment is designed to be installed and served only by a trained, state-licensed professional installer”.


WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT INSERT ANY METALLIC OBJECTS THROUGH THE VENTILATION GRILLS OR OTHER OPENINGS ON THE EQUIPMENT.

CAUTION

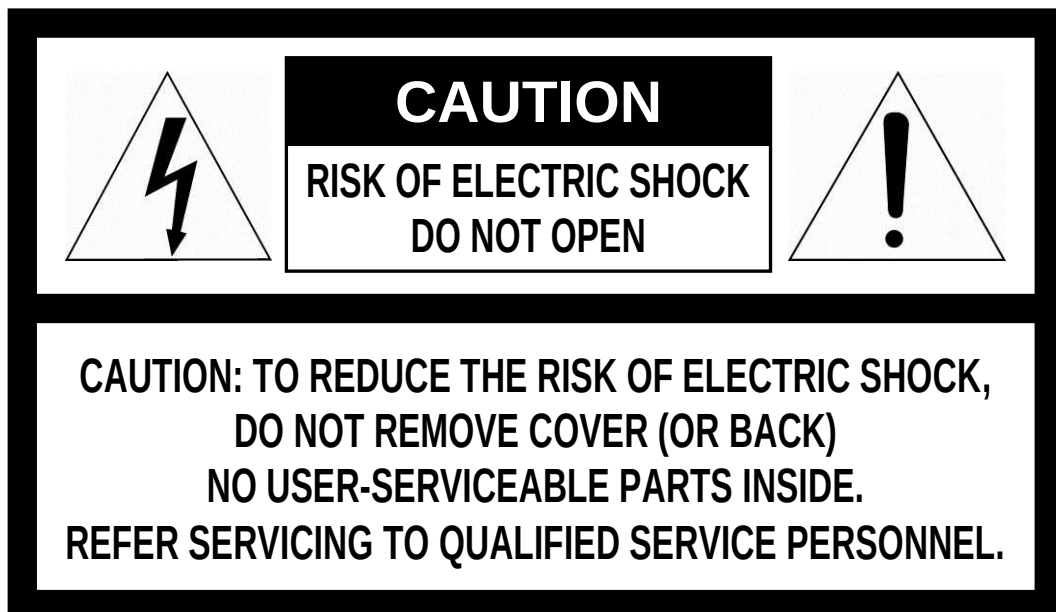

EXPLANATION OF GRAPHICAL SYMBOLS

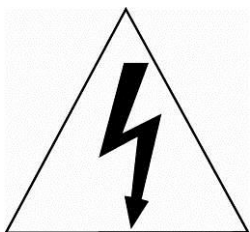

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC INFORMATION: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CE COMPLIANCE STATEMENT

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **CAUTION – THESE SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED SERVICE PERSONNEL ONLY. TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.**
16. **Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.**



Table of Contents

Chapter 1 — Introduction.....	6
1.1 Features	6
Chapter 2 — Installation and Configuration	7
2.1 Package Contents	7
2.2 Installation	8
2.2.1 Installation – Wall Mount	9
2.2.2 Installation – Ceiling Mount.....	10
2.3 Basic Configuration of Dome Camera System	11
2.4 Setting Dome Camera Address (ID)	12
2.5 Setting Dome Camera Video Type, Video Signal & Coaxitron Protocol.....	12
2.6 Connections.....	13
2.7 Getting Started.....	15
Chapter 3 — Program and Operation.....	16
3.1 Dome Camera Selection.....	16
3.2 Accessing the On-Screen Menu Utility	16
3.3 How to control the On-Screen Menu Utility	16
3.4 Auto Scan (Shortcut: SCAN)	17
3.5 Preset (Shortcut: PRST)	19
3.6 Shortcut of Preset Program.....	21
3.7 Tour (Shortcut: TOUR)	21
3.8 Pattern (Shortcut: PTRN)	23
3.9 Privacy Zone	24
3.10 Camera Menu	25
3.11 Dome Communication.....	29
3.12 Alarm	30
3.13 Dome Setup	31
Appendix A — Specifications	38
Appendix B — Troubleshooting	40
PTZ Accessories	41

Chapter 1 — Introduction

1.1 Features

The PTZ dome camera and the keyboard controller make up the building blocks for any surveillance/security system. Using multiple keyboard controllers and multiple dome cameras, no place is too large for monitoring. Extensible and flexible architecture facilitates remote control functions for a variety of external switching devices such as multiplexers and DVRs.

- Built-in optical power zoom camera with True Night Shot function
- Built-in Synchronized IR LED & Fixed IR LED: The camera is equipped with two built-in IR LED's, fixed one for wide view and zoom synchronized adjustable one for distant view.
- 240 Preset positions with the individual camera AE setup
- 8 Tours consist of Presets, Patterns, Auto Scans and other Tours can be programmed with over 300 functions and preset locations. While moving, each Preset scan can be watched in smooth **Vector Scan** mode.
- 16 Auto Scans with the normal, the vector, and the **random** mode and the endless Auto-Pan with 13 speed steps
- 8 Patterns (up to 500 seconds) and 8 Privacy Zones
- 4 Alarm inputs, 2 Alarm outputs (5VTTL)
- Variable speed from 0.1°/sec. to 380°/sec.
Three Variable speed (SLOW, NORMAL, TURBO)
- Pan/Tilt speed is inversely proportional to the zoom ratio with the option.
- Maximum speed is 380°/sec. when Preset command.
- Tilt range is -10° to 90°
- Programmable user preferences (alarm, preset, title, etc.)
- 90° Auto Flip
- Up to 3999 selectable camera addresses
- Function Run menu using DVR without function key (Pattern, Scan ...)
- Built-in RS-485 receiver driver
- 24VDC or 24VAC for Dome
- Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.

Chapter 2 — Installation and Configuration

2.1 Package Contents

The PTZ dome camera is designed with compact, small size, hard dome camera housing.

The housing is constructed of aluminum, steel and plastic. The housing is designed to be mounted on a wall or a ceiling. The housing meets the Protection Classification IP66 standards for dust and moisture resistance.

* Dome Camera	1
* Instruction Manual (This Document)	1
* Accessory Connector	1
1) 2-Pin Terminal Block	(1)
2) 3-Pin Terminal Block	(1)
3) 4-Pin Terminal Block	(1)
4) 5-Pin Terminal Block	(1)

2.2 Installation

You need one optional mount kit of the wall mount and the ceiling mount to install.

The wall or ceiling mount must be attached to a structural object such as hard wood, concrete that will support the weight of the mount and dome camera.

The use of a solid backboard is recommended when attaching to gypsum walls.


1. Remove the Protection pad and the tape from attached the dome camera.
2. Attach the mounting base to wall using the supplied M8 tapping screw and plastic bushing. (Ceiling using the supplied M6 tapping screw and bushing)
3. Wind the both thread of the pipe end with Teflon tape about 20 times for sealing. Then use a silicone rubber sealant to seal the area where the wall (ceiling) mount and the pipe meet.
4. Place a bead of silicone sealant around the wall and ceiling mount mounting flange, press it to the surface and line up the flange hole with drilled holes.

CAUTION 1: A silicone rubber sealant must be applied to seal the housing to secure waterproofing.

CAUTION 2: When installing, a bracket must be applied.

2.2.1 Installation – Wall Mount


The wall mounting plate must be attached to a structural object such as concrete that will support the weight of the mount and Dome Camera.

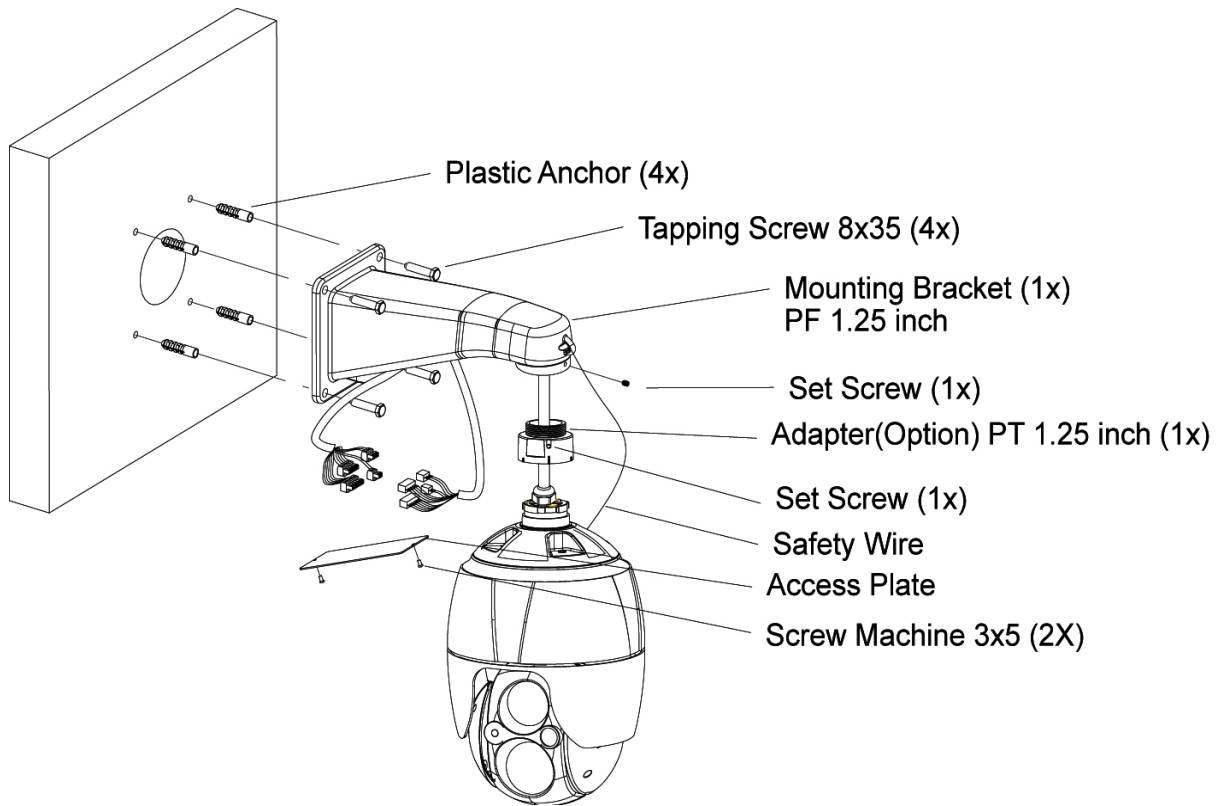



1. Select a suitable mounting location and verify there is sufficient cable to reach the middle of the Wall Mount.
2. Mark and drill mounting holes in the surface using the Wall Mount Flange.
3. Pull out cables required to connect to the dome camera from the wall.
4. Set and fix wall mount bracket using plastic anchors and M8x35 screws.
5. Open the access plate and pull out cables through rectangular access hole of the wall mount bracket.
6. Attach the 1.5 inch adapter to wall mount bracket and fix it using set screw.
7. Attach the camera's safety wire to the wall mount bracket and organize cables.
8. Close the access plate of the wall mount bracket.
9. Push in and turn clockwise the camera into the adapter, and fix it using set screw of the adapter.

2.2.2 Installation – Ceiling Mount


The ceiling mounting plate must be attached to a structural object such as concrete that will support the weight of the mount and Dome Camera.

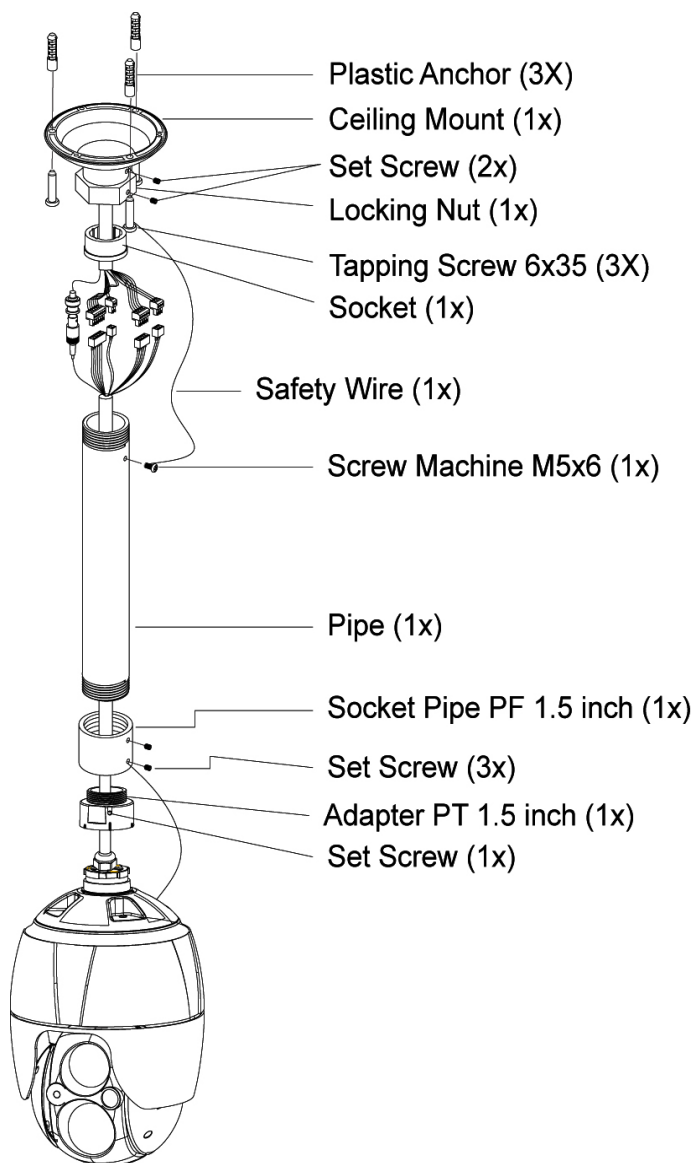

1. Select a suitable mounting location and verify there is sufficient cable to connect with cables from the housing.
2. Mark and drill mounting holes on the surface using the ceiling mount bracket.
3. Pull out cables required to connect to the dome camera from the ceiling.
4. Attach the ceiling mount bracket using plastic anchors and screws.
5. Attach 1.5 inch adapter to the pipe and fix it using set screw of the adapter.
6. Pull out camera cables through the pipe and attach the camera to adapter and fix them using set screw of the adapter.
7. After safety wire to the pipe to one of M6x35 screws of the ceiling mount bracket.
8. Join every connectors and organize cables.
9. Lock hexagonal nut of the ceiling mount bracket to fix camera attached pipe and ceiling mount bracket.

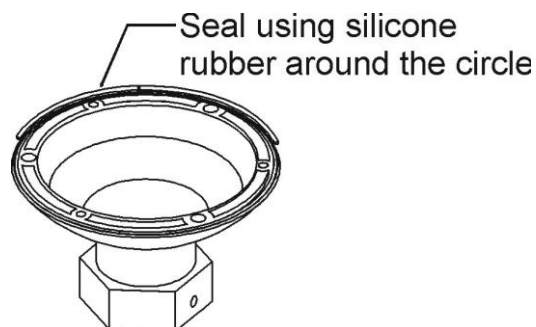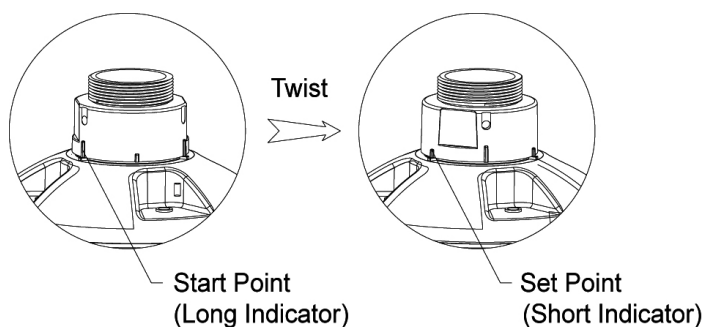


2.3 Basic Configuration of Dome Camera System

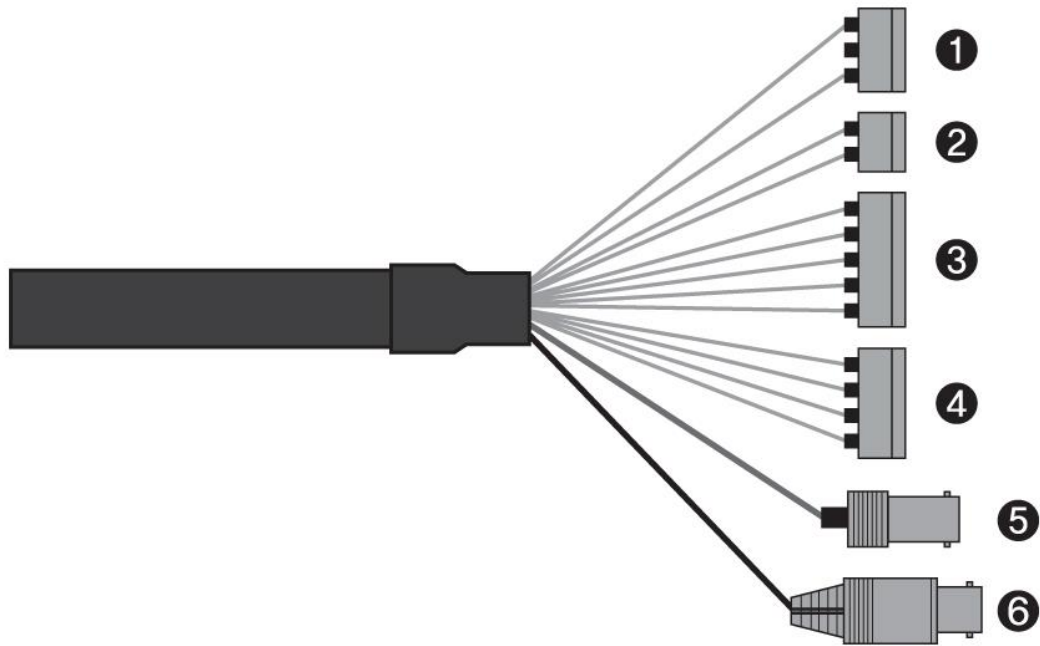

No.	Connector	Wire Color	Description
1	3-pin terminal block	RED	24VAC or 24VDC+
		WHITE	24VAC or 24VDC-
2	2-pin terminal block	GREEN	RS-485+
		BLUE	RS-485-
3	5-pin terminal block	GRAY	ALARM INPUT 1
		VIOLET	ALARM INPUT 2
		ORANGE	ALARM INPUT 3
		SKY BLUE	ALARM INPUT 4
		BLACK	GND
4	4-pin terminal block	YELLOW	ALARM OUTPUT 1
		BLACK & WHITE	GND
		SKY BLUE & BALCK	ALARM OUTPUT 2
		ORANGE & BLACK	GND
5	BNC jack	BLUE	HD-TVI/AHD OUTPUT
6	BNC jack	BLACK	CVBS OUTPUT

The dome camera must be installed by qualified service personnel in accordance with all local and federal electrical and building codes.

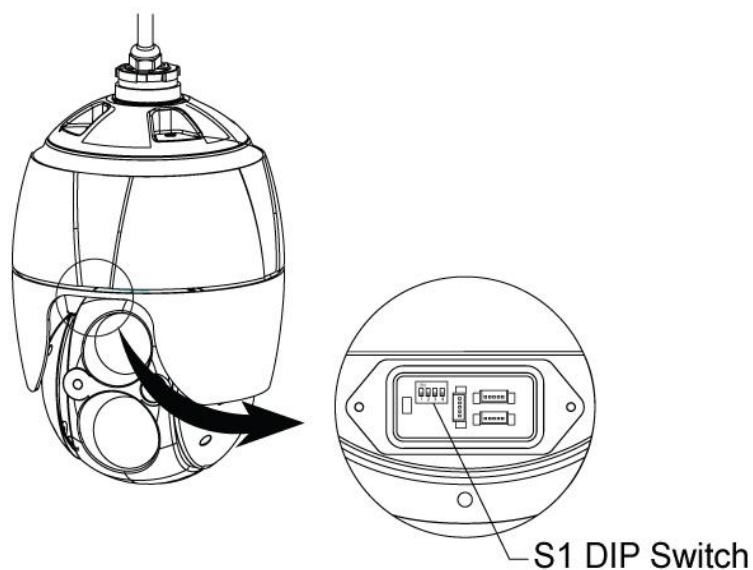


NOTE: Open the DIP switch cover and change the setting of DIP switch.
The cover should be closed after setting DIP switch.

2.4 Setting Dome Camera Address (ID)

To prevent damage, each dome camera must have a unique address (ID).
The factory default setting is 1.

Refer to '3.11 Dome Communication' section for detailed information.

2.5 Setting Dome Camera Video Type, Video Signal & Coaxitron Protocol

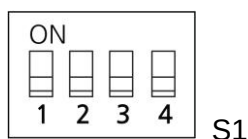

You can set video type with D1 and video signal with D2 in S1.

S1-D1	Video Type
OFF	HD-TVI OUTPUT
ON	Reserved

S1-D2	Video Signal
OFF	NTSC
ON	PAL

You can set coaxitron protocol with D3 and D4 in S1.

S1-D3	S1-D4	HD-TVI OUTPUT	
OFF	OFF	Nuvico-C	
ON	OFF	Pelco-C	
OFF	ON	Reserved	
ON	ON	Reserved	

2.6 Connections

- **Connecting to the RS-485**

The dome camera can be controlled remotely by an external device or control system, such as a control keyboard, using RS-485 half-duplex serial communications signals.

- **Connecting HD-TVI Output connector**

Connect the HD-TVI output (BNC) connector to the monitor or video input.

- **Connecting CVBS Output connector**

Connect the CVBS output (BNC) connector to the monitor or video input.

To prevent damage, each dome camera must have a unique address (ID).

The factory default ID and Baudrate are “1” and “9600”.

DOME COMMUNICATION	
	*
DOME ID	: 0001
PROTOCOL	: AUTO
BAUDRATE	: 9600
PARITY	: NONE
TERMINATION	: OFF
SAVE AND EXIT(ESC TO CANCEL)	

DOME ID	1 ~ 3999
PROTOCOL	AUTO, F2/F2E, PELCO-PD
BAUDRATE	2400, 4800, 9600, 19200, 38400 bps
PARITY	NONE, EVEN, ODD
TERMINATION (RS-485)	OFF, ON

- **Connecting Alarms**

- **A1,A2,A3,A4 (Alarm Input 1,2,3,4)**

You can use external devices to signal the dome camera to react on events. Mechanical or electrical switches can be wired to the A1,A2,A3,A4 (Alarm Input 1,2,3,4) and G (Ground) connectors.

See Chapter 3 — Program and Operation for configuring alarm input.

- **G (Ground)**

NOTE: All the connectors marked G or GND are common.

Connect the ground side of the alarm input and/or alarm output to the G (Ground) connector.

- **AO1,AO2 (5VTTL Alarm Output 1,2)**

The dome camera can activate external devices such as buzzers or lights. Connect the device to the AO1,AO2 (Alarm Output 1,2) and G (Ground) connectors.

See Chapter 3 — Program and Operation for configuring alarm output.

- **Connecting the Power**


Connect power of 24VDC or 24VAC for the dome camera.

When using a 24VDC adapter, connect the positive (+) pole to the '+' position and the negative (-) pole to the '-' position.

Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.

2.7 Getting Started

Once installed apply power to the dome camera. The dome camera will start a configuration sequence.

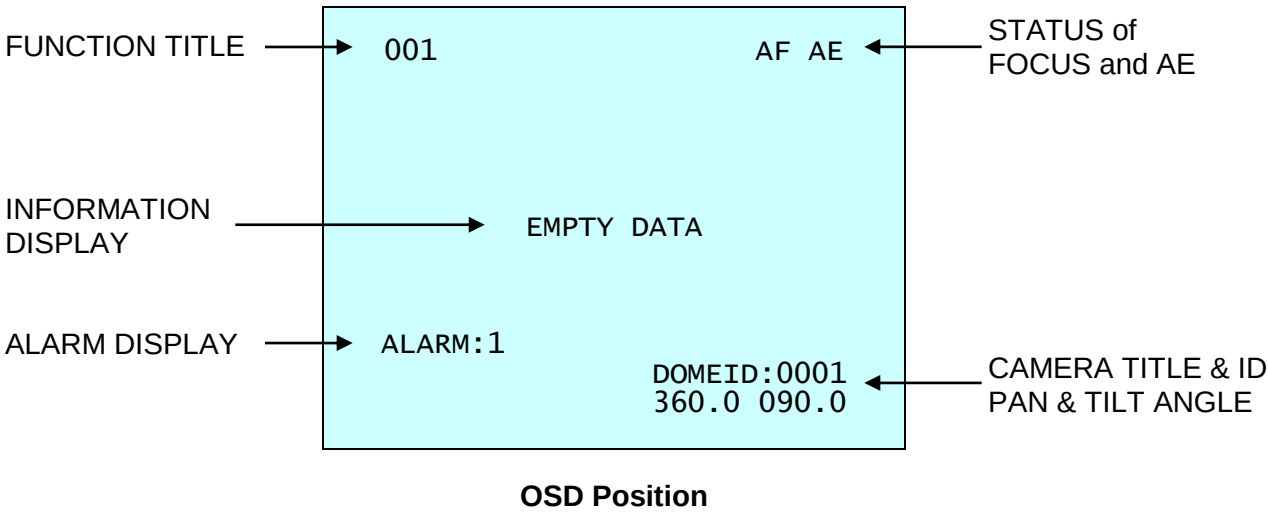

Chapter 3 — Program and Operation


3.1 Dome Camera Selection

Before you program or operate a dome camera, you must select the dome camera by pressing **No.** + **CAM** keys.

Example: Pressing **1** , **0** + **CAM** keys sequentially will select dome camera 10. The selected dome camera ID will be displayed on the LCD monitor of the keyboard controller.

3.2 Accessing the On-Screen Menu Utility

You can call up the On-screen menu utility on your monitor by pressing the **MENU** key on the keyboard controller, the following On-screen menu utility will appear:

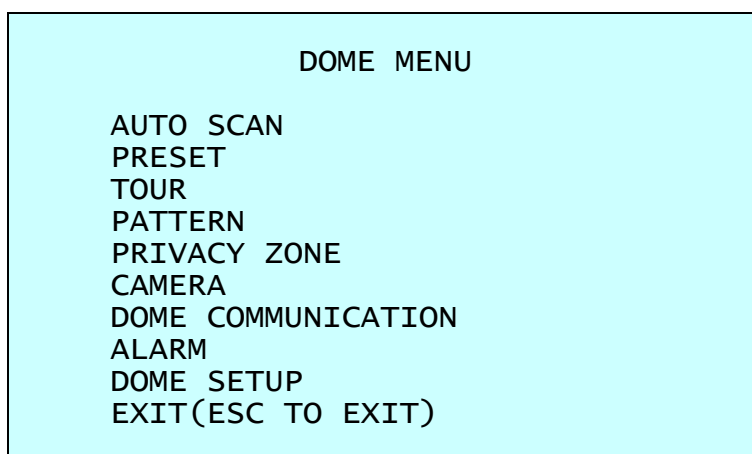

3.3 How to control the On-Screen Menu Utility

Function	Button
Call the On-screen menu utility.	MENU
Navigate through the menu items.	Joystick up or down
Go into the sub-menu items.	Joystick left or right or IRIS Open
Change value. Enter the editing title mode.	Joystick left or right or Zoom handle twist or Tele , Wide
Change value of angle.	CTRL + Joystick
Enter the changing angle mode.	IRIS Open
Exit the changing angle mode.	IRIS Close
Escape (EXIT)	ESC

3.4 Auto Scan (Shortcut: **SCAN**)

The Auto Scan supports up to 17 programmed angles at user-programmable speeds. Follow these steps to program Auto Scan:

AUTO SCAN SETUP	
NUMBER	: 01
TITLE	: A01
MODE	: NORMAL
SPEED	: 5 STEP
START ANGLE	: -----
END ANGLE	: -----
SCAN DIR	: CCW
SWAP	: OFF
DWELL	: 03 SEC
SAVE AND EXIT(ESC TO CANCEL)	

- NUMBER** 01 ~ 08, 10 ~ 17, **09**: AUTO-PAN mode.
TITLE up to 6 characters
MODE NORMAL, VECTOR, RANDOM (AUTO-PAN mode: NORMAL, RANDOM only).
- NORMAL Move from start point to end point in panning only
VECTOR Move from start point to end point including tilt and zoom simultaneously and linearly.
RANDOM Move randomly between the start point and the end point
- SPEED** 1 ~ 13 step, the lower number means the slower speed.
SCAN DIR Set the Scan direction, CCW (Counter Clock Wise), CW (Clock Wise).
SWAP Swaps the start point for the end point.
DWELL Set the dwell time at the both end, 01 ~ 99 seconds.

1. Press the **SCAN** key to enter the Auto Scan menu directly. Or press the **MENU** key to display the main menu on the monitor. Scroll to Auto Scan and push the **Joystick** to the right.
2. Select “**NUMBER**” and set the desired number by pushing the **Joystick** to the left or right.
3. Select “**TITLE**” and twist the **Joystick** to enter the title edit mode.
4. Twist the **Joystick** to change the alphanumeric characters and move the next position by pushing the **Joystick** to the left or right. Or move down to the character table and press the **CTRL** or **IRIS Open** key at the desired character then the cursor position moves to the next position automatically. Push the **Joystick** to the left or right at the “ALL DELETE” field to delete all characters. Push the **Joystick** to the left or right at the “EXIT” field to finish title edit menu.

TITLE EDIT MENU (CTRL KEY)	
A01	
*	
A B C D E F G H I J	
K L M N O P Q R S T	
U V W X Y Z 0 1 2 3	
4 5 6 7 8 9 ()	
ALL DELETE	
EXIT(ESC TO EXIT)	


5. Select **"MODE"** and **"SPEED"**.
6. Select **"START ANGLE"**. Hold down the **CTRL** key while selecting the start position using the **Joystick**. Current panning position will be displayed. Release the **CTRL** key to complete the selection of the start position. Or press the **IRIS Open** key then the **"CONTROL"** displays. Move the desired position and the zoom position. Press the **IRIS Close** key then the **"CONTROL"** disappears. To adjust at the 0.1 degree interval, twist the **Joystick** at the pan field and the tilt field.
7. Select **"END ANGLE"**. Hold down the **CTRL** key while moving the **Joystick** to select the end position. The end position angle should be larger than start position. Release the **CTRL** key to complete the selection of the end position. Or press the **IRIS Open** key then the **"CONTROL"** displays. Move the desired position and the zoom position. Press the **IRIS Close** key then the **"CONTROL"** disappears. To adjust at the 0.1 degree interval, twist the **Joystick** at the pan field and the tilt field.
8. Set **"SCAN DIR"** to CCW or CW.
9. Select **"SWAP"**, Set to ON to exchange the start angle and the end angle.
10. Set **"DWELL time"**.
11. Select **"SAVE AND EXIT"** and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

NOTE: Pressing the HOME key delete stored data at the angle field.

To set the position using the Preset position:

- a. Before entering the Auto Scan menu, select a Preset position as a starting point for Auto Scan.
Example: **2** + **PRST** keys and do step 1 to 5. In step 6, just press the **CTRL** key at the start angle position, the current position will be displayed as a start position.
- b. Save and Exit from the menu.
- c. In normal mode, call a Preset to be the end point of Scan. Press **3** + **PRST** keys then press the **SCAN** key to enter the Auto Scan menu. Move the cursor position to END ANGLE. Just press the **CTRL** key at the end angle position. Save and exit from the menu.

Press the **SCAN** key on the angle field to display with the small OSD. Then the screen will show as below.

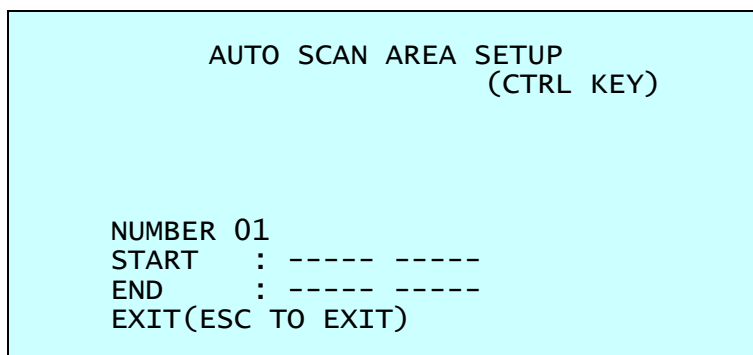

The setting procedure is the same as above.

NOTE: 09: AUTO-PAN mode (endless panning)

3.5 Preset (Shortcut: **PRST**)

If you need to view specific places routinely, you should program Presets. A Preset is a programmed video scene with automatic pan, tilt, zoom, focus, and AE settings. Once programmed, placing the number position and pressing the **PRST** key on your controller calls up that Preset automatically. In addition, Presets may be assigned the “home” position for the dome camera. As many as 240 Presets, whose positions are saved in the dome’s firmware, may be programmed.

There are eight pages of Preset menu. Each page has 30 Presets. Pages can be scrolled by pushing the **Joystick** to the left or right on the first or last No. of Preset.

PRESET SETUP

NUMBER : 001
TITLE : -----
CAMERA SET
DWELL : -- SEC
1 2 3 4 5 6 7 8 9 0
- * - - - - -
- - - - -
- - - - -
NEXT PAGE
SAVE AND EXIT(ESC TO CANCEL)

- Blank Preset position
- * Position has the Preset
- ! Current cursor position

Follow steps below to store the Preset positions:

1. Press the **PRST** key to enter the Preset menu directly. Or press the **MENU** key to display the main menu on the monitor. Scroll to Preset and push the **Joystick** to the right.
2. Select the blank Preset position to be stored by pushing the **Joystick** up, down, right, or left.
3. After selecting a blank position, press and hold the **CTRL** key. Use the **Joystick** to control the direction of the camera and lens.
4. After aiming the camera (view direction and lens control), release the **CTRL** key. The cursor will be on the “**TITLE**” after saving data then twist the **Joystick** or press the **Tele** or **Wide** key to edit the Preset title. Follow the procedure of the Auto Scan above to edit titles.
5. Select “**CAMERA SET**” and push the **Joystick** to the left or right. Then the Preset camera setup displays.

PRESET CAMERA SETUP

FOCUS : AUTO
MOTION: OFF
MOTION SETUP
AE SETUP
SAVE AND EXIT(ESC TO CANCEL)

- | | |
|-------------------|------------------------|
| Set FOCUS | AUTO, MANUAL, ONE PUSH |
| Set MOTION | OFF, ON |

Select "**MOTION SETUP**" and push the **Joystick** to the left or right. Then the MOTION setup displays.

MOTION SETUP	
SENSITIVITY:	10
RESOLUTION :	02
POSITION :	ALL
DELAY :	00 SEC
OUTPUT :	OFF
HOLD TIME :	03 SEC
EXIT(ESC TO EXIT)	

Set SENSITIVITY	00 ~ 20
Set RESOLUTION	01 ~ 04
Set POSITION	ALL, CENTER
Set DELAY	00 ~ 05 seconds
Set OUTPUT	OFF, OUT1, OUT2
Set HOLD TIME	03 ~ 99 seconds

Select "**AE SETUP**" and push the **Joystick** to the left or right. Then the AE setup displays. Refer to the AE SETUP in the camera setup.

- Set "**DWELL time**". (03 ~ 99 seconds)
- To select the next page of Presets, scroll the page by pushing the **Joystick** to the left or right on the first or last columns of the menu.
- Repeat step 2 through 7 for each additional Preset position.
- Select "**SAVE AND EXIT**" and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

NOTE: Press the **HOME** key at programmed Preset position (*) to delete a programmed Preset view.

The position, which is marked with the *, already has the Preset view assigned. Press the **PRST** key on the * to review the stored Preset. The camera will show the stored Preset scene.

PRESET AREA SETUP (CTRL KEY)	
NUMBER 001	
PAN	TILT
000.0	000.0
EXIT(ESC TO EXIT)	

Hold down the **CTRL** key while selecting the desired scene using the **Joystick**. Current position will be displayed. Release the **CTRL** key to complete. Or press the **IRIS Open** key then the "CONTROL" displays. Move the desired position and the zoom position. Press the **IRIS Close** key then the "CONTROL" disappears. Select "EXIT" and push the **Joystick** to the right.

3.6 Shortcut of Preset Program

After selecting the desired scene, press No. (1 to 240), and press the **CTRL** and **PRST** keys subsequently. The current view will be stored to the selected Preset number if the Preset number is empty. If selected Preset number is not empty, "OVER WRITE" message will be displayed on the monitor and select the "OK" and push the **Joystick** to the right to overwrite.

Example: **1**, **0**, **1** + **CTRL** + **PRST** keys will store current view as Preset no. **101**. In this case, focus will be programmed as Auto, dwell time will be set to 3 second, and the current AE mode will be programmed.

3.7 Tour (Shortcut: **TOUR**)

There are 8 programmable Tours. Each Tour consists of up to 42 Preset positions, Patterns, Scans or other Tours (second-level). Using second-level Tours, it can be expanded to over 300 functions in a single Tour.

TOUR SETUP	
NUMBER	: 01
TITLE	: T01
SCAN TYPE	: NORMAL
SPEED	: -- STEP
TOUR FUNC	
SAVE AND EXIT(ESC TO CANCEL)	

TOUR FUNC SETUP (CTRL KEY)	
DWELL	: -- SEC
003 A04	--- --- ---
---	---
---	P01 --- ---
---	T02 --- ---
---	---
---	---
---	---
---	---
EXIT(ESC TO EXIT)	

---	Blank position
SCAN TYPE	NORMAL, VECTOR
DWELL	03 ~ 99 seconds
003	Preset (1 ~ 240)
A04	Auto Scan (1 ~ 8, 10 ~ 17)
P01	Pattern (1 ~ 8)
T02	Tour (1 ~ 8)

Follow the steps below to program the Tours:

1. Press the **MENU** key to display the main menu on the monitor. Scroll to Tour and push the **Joystick** to the right to enter the Tour menu. Or just press the **TOUR** key on the keyboard.
2. Select "NUMBER" and set the desired number by pushing the **Joystick** to the left or right.
3. Choose a blank position to be programmed by pushing the **Joystick** up, down, right, or left.

4. To add a stored Preset, twist the **Joystick** then the stored Preset number displays.
5. To place functions other than Preset, press the **TOUR**, **PTRN** or **SCAN** keys for Tour, Pattern or Auto Scan respectively.
6. You can also overwrite the programmed number and remove a stored number from the Tour, press the **HOME** key on the stored number, a blank position mark (---) will be displayed.
7. Repeat step 2 through 6 for each desired position. Each title will be displayed on top of the line.
8. To edit the "TITLE", follow the procedure of the Auto Scan above to edit titles.
9. Select "SAVE AND EXIT" and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

You can expand the Tour sequence by calling other programmed Tours.

NOTE: The speed applies in the vector mode only.

NOTE: In the Tour mode, in conjunction with Preset and Auto Scan, you can make the camera travel from a Preset position to another Preset position at a specific speed.

Example: Preset 001>002>003>004>005>006, Auto Scan 01 starts at Preset 002, ends at Preset 003, Auto Scan 02 starts at Preset 005, ends at Preset 006;
Tour 001, 002, A01, 004, A02.

1 → 2 2~3 → 4 → 5~6, repeat
where → : Quick move, ~ : Programmed speed

To change the dwell time of the Preset in the Tour:

Use the **Joystick** to move the cursor to a stored Preset position.

By pressing the **PRST** key, the camera will move to the stored Preset view and the cursor moves to the dwell time field.

After changing the dwell time, press the **PRST** key and the cursor moves to the Preset number.

To assign the functions other than Preset in the Tour when the function key is not existed:

Use the **Joystick** to move the cursor to a stored Preset position.

Pressing the **CTRL** or **IRIS Open** key will change the Preset number to other function (Auto Scan, Pattern, Tour or Preset) with the first programmed number.

To change the number, twist the **Joystick** or press the **Tele** or **Wide** key.

3.8 Pattern (Shortcut: **PTRN**)

The Pattern feature records user control of the selected dome camera. Up to 8 Patterns can be stored and played back by pressing **No.** + **PTRN** keys subsequently.

PATTERN SETUP			
(CTRL KEY)			
NO	TITLE	SEC	PERCENT
1 :	P01	000	00.0%
2 :	P02	000	00.0%
3 :	P03	000	00.0%
4 :	P04	000	00.0%
5 :	P05	000	00.0%
6 :	P06	000	00.0%
7 :	P07	000	00.0%
8 :	P08	000	00.0%
SAVE AND EXIT(ESC TO CANCEL)			

Follow steps below to program the Pattern:

1. Press the **MENU** key to display the main menu on the monitor. Scroll to Pattern and push the **Joystick** to the right to enter the Pattern menu. Or just press the **PTRN** key on the keyboard.
2. Select the desired Pattern to be programmed by pushing the **Joystick** up or down. If the Pattern is not 000, a Pattern has already been recorded. Patterns can be overwritten.
3. Press and hold down the **CTRL** key while controlling the camera direction and zoom with the **Joystick**. The dome will be automatically recorded until you release the **CTRL** key. Or press the **IRIS Open** key then the "CONTROL" displays. Move the position and the zoom position. Press the **IRIS Close** key then the "CONTROL" disappears.
4. To edit the "TITLE", follow the procedure of the Auto Scan above to edit titles.
5. Select "SAVE AND EXIT" and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

NOTE: Press the **HOME** key at any programmed position to delete the Pattern.

NOTE: If Pattern recording time reaches 200 seconds, it will automatically stop for a moment.

Press the **PTRN** key on the title field to display with the small OSD. Then the screen will show as below.

PATTERN AREA SETUP	
(CTRL KEY)	
NUMBER 01	
000	00.0%
EXIT(ESC TO EXIT)	

The setting procedure is the same as above.

3.9 Privacy Zone

Hide up to 8 unwanted scenes in a camera.

There are two pages of Privacy Zone menu. Each page has 4 Privacy Zones.

PRIVACY ZONE SETUP (CTRL KEY)			
NO		METHOD	COLOR
01	ON	BLOCK	BLACK
02	ON	BLOCK	BLACK
03	OFF	-----	BLACK
04	OFF	-----	BLACK
NEXT PAGE			
SAVE AND EXIT(ESC TO CANCEL)			

1. Place the cursor at the field.
2. Hold down the **CTRL** key displays the privacy area menu while selecting the position using the **Joystick**. Current position will be displayed. Release the **CTRL** key to complete the selection of the position. Or press the **IRIS Open** key then the privacy area menu displays. Move the desired position. Press the **IRIS Close** key then the "CONTROL" disappears.

To adjust the size, twist the **Joystick** or press the **Tele** or **Wide** key.


Returns to the previous menu.

PRIVACY AREA MENU (CTRL KEY)	
NUMBER 01	
354.8	344.8
EXIT(ESC TO EXIT)	

3. To turn the stored zone ON or OFF, twist the **Joystick** or press the **Tele** or **Wide** key.
4. Set the "COLOR": "BLACK", "WHITE", "YELLOW", "CYAN", "GREEN", "MAGENTA", "RED" or "BLUE".
5. Select "SAVE AND EXIT" and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.


NOTE: Press the **HOME** key to delete programmed Privacy Zone at the title field.

3.10 Camera Menu

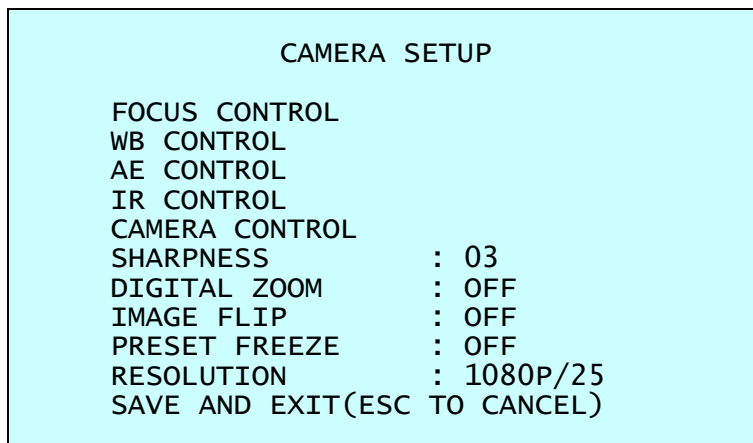

- SHARPNESS** The higher the value, the more edges in the picture will be enhanced.
(0 ~ 10)
- DIGITAL ZOOM** OFF: Zoom range is limited to the optical.
2X: Zoom is extendable up to 2X of digital range.
4X: Zoom is extendable up to 4X of digital range.
8X: Zoom is extendable up to 8X of digital range.
MAX: Zoom is extendable Max digital zoom range.
- IMAGE FLIP** This function turns the video output from the camera upside down and reverses it horizontally.
This option is helpful to install in the opposite side.
- PRESET FREEZE** ON: the image is frozen during calling Preset.
- RESOLUTION** HD-TVI Output: 1080P/30, 1080P/25, 720P/60, 720P/50, 720P/30, 720P/25
AHD Output: 1080P/30, 1080P/25

• FOCUS CONTROL

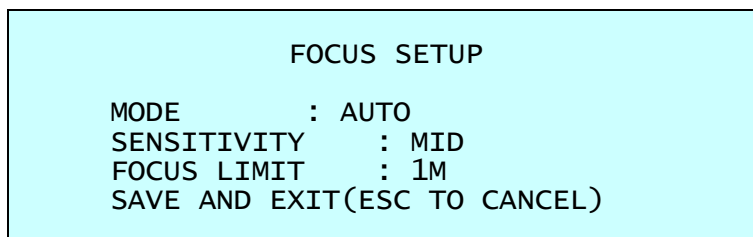

- MODE** AUTO, MANUAL, ONE PUSH, CONST MANUAL
Use manual mode in normal use.
- SENSITIVITY** LOW, LOW.MID, MID, MID.HIGH, HIGH
- FOCUS LIMIT** This distance is approximate value and the focus operates from the setting value.

CAUTION: Avoid continuous, 24-hour use of the auto focus. This will shorten the lifespan of the lens.

• WB (White Balance) CONTROL

```

                                WB SETUP

MODE                          : AUTO
R GAIN                        : ---
B GAIN                        : ---
SAVE AND EXIT(ESC TO CANCEL)

```

MODE AUTO, MANUAL, INCANDESCENT, FLUORESCENT, OUTDOOR

AUTO Computes the white balance value output using color information from the entire screen automatically.

INCANDESCENT Auto white balance mode that is compatible with incandescent lamps.

FLUORESCENT Auto white balance mode that is compatible with fluorescent lamps.

OUTDOOR Outdoor white balance mode

MANUAL Manual mode, you can change R and B Gain manually.

R GAIN 0 ~ 255
B GAIN 0 ~ 255

R GAIN / B GAIN modes are controllable only in MANUAL Mode.

• AE CONTROL

```

                                AE SETUP

MODE                          : AUTO
DSS                           : OFF
IRIS                          : AUTO
SHUTTER                       : AUTO
BRIGHT                        : 10
GAIN LIMIT                    : 07
NIGHT SHOT                   : AUTO
ADDITIONAL AE
SAVE AND EXIT(ESC TO CANCEL)

```

MODE AUTO, MANUAL, I.PRIO, S.PRIO

AUTO Auto exposure mode

MANUAL Variable Iris, Shutter speed

I.PRIO Variable Iris, Auto Shutter speed

S.PRIO Variable Shutter speed, Auto Iris

DSS OFF, x2 ~ x8

IRIS F1.8 ~ F32

SHUTTER 1/25 (30) ~ 1/30000

BRIGHT 0 ~ 20

GAIN LIMIT 0 ~ 7

NIGHT SHOT AUTO, ON, OFF, GLOBAL

NOTE: Values in () are for NTSC Camera.

The NIGHT SHOT option removes the IR cutoff filter of the camera and makes the camera sensitive to near infrared.

AUTO Camera goes in to B&W mode at low light.
GLOBAL Controlled by the keyboard

(NOTE: GLOBAL function operates F2E protocol only)

The operator can enable NIGHT SHOT for all dome cameras at the same time.

If the NIGHT SHOT mode is set to GLOBAL, "999" + **ENTER** will turn Off the NIGHT SHOT mode and "888" + **ENTER** will turn On the NIGHT SHOT mode.

ON B/W mode
OFF Color mode

NOTE: AUTO in NIGHT SHOT function is not applied in "MANUAL" mode of AE Control.

ADDITIONAL AE

ADDITIONAL AE SETUP		
ACE	:	OFF
WDR	:	OFF
WDR WEIGHT	:	--
BLC	:	OFF
HLC	:	OFF
HLC LEVEL	:	--
HLC COLOR	:	---
DEFOG	:	OFF
EXIT(ESC TO EXIT)		

ACE OFF, LOW, MID, HIGH
WDR OFF, ON **(NOTE: When ON, BLC will be disabled.)**
WDR WEIGHT LOW, MID, HIGH
BLC OFF, ON **(NOTE: When ON, WDR will be disabled.)**
HLC OFF, ON
HLC LEVEL 0 ~ 20
HLC COLOR BLACK, WHITE, YELLOW, CYAN, GREEN, MAGENTA, RED, BLUE
DEFOG OFF, ON

• IR CONTROL

When used with IR illuminator, changing the zoom ratio automatically synchronizes the IR illuminator.

IR CONROL		
IR MODE	:	SENSOR
FIXED IR BRIGHT	:	2
MOVING IR BRIGHT	:	4
IR ON LEVEL	:	035
IR OFF LEVEL	:	055
IR DELAY	:	03
FIXED IR LEVEL	:	48
MOVING IR LEVEL	:	17
MOVING IR MODE	:	MIDDLE
SAVE AND EXIT(ESC TO CANCEL)		

IR MODE	SENSOR, OFF, ON, DAY/NIGHT
SENSOR	It will be in sync with the built-in brightness sensor of the camera. The IR mode will be controlled according to the illumination.
OFF	Does not use the IR illuminator.
ON	Activates the IR illuminator. Always displays black & white image.
DAY/NIGHT	Synchronizes the IR Illuminator with Day/Night mode of the camera. Set the Day/Night mode so that the product uses the IR illuminator in the night but does not use the illuminator during the day.
FIXED IR BRIGHT	Specify the bright of the Fixed IR illuminator. (0 ~ 4)
MOVING IR BRIGHT	Specify the bright of the Moving IR illuminator. (0 ~ 4)
IR ON LEVEL	Specify the illumination level that activates the IR mode. If the illumination is below the specified level, the indicator will turn on. (31 ~ 99)
IR OFF LEVEL	Specify the illumination level that deactivates the IR mode. If the illumination is above the specified level, the indicator will turn off. (31 ~ 99)
IR DELAY	The duration of both the lighting conditions can be customized to let the IR divert between activation and deactivation. (1 ~ 60)
FIXED IR LEVEL	Specify the level when the Fixed IR is turned off.
MOVING IR LEVEL	Specify the level when the Moving IR is turned off.
MOVING IR MODE	Specify the intensity of the light of the Moving IR in the center of the screen.

NOTE: The IR is turned on, the D/N mode changes BW automatically.

• CAMERA CONTROL

CAMERA CONROL	
D->N LEVEL	: 076
N->D LEVEL	: 042
D/N DELAY	: 03 SEC
CHROMA	: 08
GAMMA	: 2
DNR	: MID
DIS	: OFF
SAVE AND EXIT(ESC TO CANCEL)	

D->N LEVEL	0 ~ 255
N->D LEVEL	0 ~ 255
D/N DELAY	1 ~ 60 seconds
CHROMA	0 ~ 20
GAMMA	0 ~ 4
DNR	OFF, LOW, MID, HIGH
DIS	OFF, ON

3.11 Dome Communication

To prevent damage, each dome camera must have a unique address (ID).
The factory default setting is 1.

DOME COMMUNICATION	
	*
DOME ID	: 0001
PROTOCOL	: AUTO
BAUDRATE	: 9600
PARITY	: NONE
TERMINATION	: OFF
SAVE AND EXIT(ESC TO CANCEL)	

DOME ID	1 ~ 3999
PROTOCOL	AUTO, F2/F2E, PELCO-PD
BAUDRATE	2400, 4800, 9600, 19200, 38400 bps
PARITY	NONE, EVEN, ODD
TERMINATION (RS-485)	OFF, ON

3.12 Alarm

ALARM SETUP						
						(CTRL KEY)
NO	PRI	FUN	IN	OUT	HLD	LATCH
1	1	001	NO	OUT1	03	OFF
2	1	---	OFF	OFF	03	OFF
3	1	---	OFF	OFF	03	OFF
4	1	---	OFF	OFF	03	OFF
DWELL				:	03	SEC
ALARM OUT SETUP						
SAVE AND EXIT(ESC TO CANCEL)						

NO (Number)	alarm input number
PRI (Priority)	the lower number has higher priority (0 ~ 4)
FUN (Function)	Stored function number to be called by alarm.
IN (Input)	NO/NC – normally open/closed, OFF – ignore
OUT (Output)	OUT1 ~ OUT2 – 5VTTL output, OFF – no output
HLD (Hold)	Alarm will be held for programmed time. (03 to 99 seconds)
LATCH	ON – Alarm message will remain on the screen even though alarm input is deactivated. OFF – Alarm message will disappear from the screen after programmed hold time when alarm input is deactivated.
DWELL	means the dwell time during multiple alarms, 03 to 99 seconds.

ALARM OUT SETUP	
OUT1	: ALARM
OUT2	: 1 MIN
EXIT(ESC TO EXIT)	


ALARM: alarm output is operated during an alarm operation or by the short key of our keyboard.

1 ~ 5 MIN (minute): alarm output is operated during this setting time only by the function run of the dome menu or the short key of our keyboard.


NOTE: This 1 ~ 5 MIN setting is not operated by an alarm.

There are 5 levels of priority. The function can be selected by Preset, Auto scan, Pattern or Tour and “0” is the highest priority. Lower priority alarms won’t be serviced until the higher priority alarm is completed. Equal priority alarms will be serviced repeatedly with the dwell time.

3.13 Dome Setup

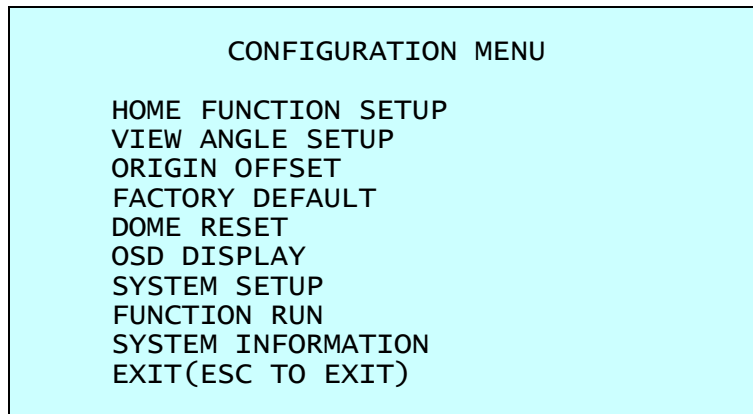

• HOME FUNCTION SETUP

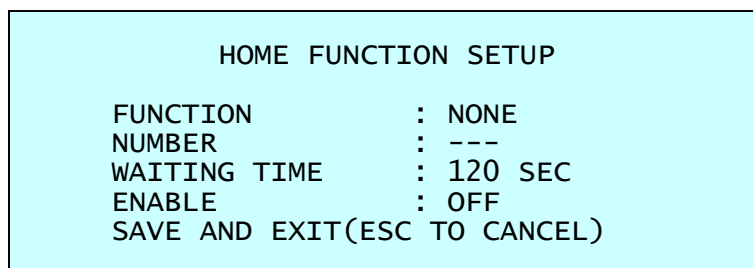

FUNCTION	NONE, TOUR, PATTERN, AUTO SCAN, PRESET
NUMBER	---
WAITING TIME	10 ~ 240 seconds
ENABLE	ON, OFF

The Home Function can be set so that the camera automatically goes to Tour, Pattern, Auto Scan or Preset after the keyboard controller has been idle for a specified amount of time.

For example, if the controller is idle for 120 seconds, the camera goes to Preset 1.

Follow these steps to program the Home position:

1. Select “**FUNCTION**” by pushing the **Joystick** to the left or right to scroll through the None, Tour, Pattern, Auto Scan or Preset functions.
2. Select “**NUMBER**” and push the **Joystick** to the left or right. The recorded function number will scroll.
3. Select “**WAITING TIME**” and push the **Joystick** to the left or right to select from 10 to 240 seconds.
4. Select “**ENABLE**” and turn to ON or OFF by pushing the **Joystick** to the left or right.

• VIEW ANGLE SETUP

VIEW ANGLE SETUP	
PANNING RANGE	
FLIP	: AUTO
TILT ANGLE LIMIT	: 00°
SAVE AND EXIT(ESC TO CANCEL)	

FLIP OFF, AUTO

OFF: The dome camera moves until 90° vertically.

AUTO: When the camera reaches the floor directly above the moving object, it will stop.

At that time, release the **Joystick** instantly and pull it down again to run the auto-flip function. When you use the panning range, it is recommended to use the flip mode to AUTO.

TILT ANGLE LIMIT -10° ~ 10°

This option is designed to limit the view angle as there is some obstruction in zooming out on specific areas of the tilt angle.

NOTE: Focus issues may occur in certain conditions.

PANNING RANGE

When the dome camera is installed near a wall, panning range can be limited by user.

PANNING RANGE SETUP (CTRL KEY)	
RIGHT LIMIT	: 000.0
LEFT LIMIT	: 000.0
ENABLE	: OFF
SWAP	: OFF
AUTO PAN	: ON
SAVE AND EXIT(ESC TO CANCEL)	

1. Place the dome camera under 90 degree vertically.
2. Set "**RIGHT LIMIT**" by pushing the **Joystick** to the right.
3. Set "**LEFT LIMIT**" by pushing the **Joystick** to the left.
4. Set "**ENABLE**" to ON to use.

To exchange the right and the left limit, set "**SWAP**" to ON.

To apply limits on the auto pan (endless panning), set "**AUTO PAN**" to ON.

- **ORIGIN OFFSET**

OFFSET SETUP	
(CTRL KEY)	
PAN OFFSET	: 000.0
TILT OFFSET	: 000.0
ENABLE	: OFF
SAVE AND EXIT(ESC TO CANCEL)	

This feature is useful to align a new dome camera exactly the same as the previously installed dome camera.

Dome camera's origin set and all data initialize option do not override offset values. Only the default set option in this menu will set the offset value to zero. This can be used to avoid ceiling obstructions.

- **FACTORY DEFAULT**

Select "**FACTORY DEFAULT**" to initialize the data.

FACTORY DEFAULT
ARE YOU SURE ?
CANCEL
OK

- **DOMES RESET**

DOMES RESET
ARE YOU SURE ?
CANCEL
OK

This feature is used to re-calibrate the orientation of a selected dome camera. Origin offset value is not affected by this function. (Offset is still valid after origin set.)

• OSD DISPLAY

OSD DISPLAY SETUP	
LANGUAGE	: ENGLISH
TITLE	: DOMEID
DOME OSD	: ON
FOCUS/EXPOSURE	: OFF
COLOR	: YELLOW
SAVE AND EXIT(ESC TO CANCEL)	

LANGUAGE Select the desired language.

TITLE up to 6 characters

DOME OSD ON, POSITION, ON(ZOOM), ZOOM, OFF
All display or title will disappear when DOME OSD DISPLAY is set to OFF.

FOCUS/EXPOSURE ON, OFF
ON: FOCUS and EXPOSURE displays. (AF AE)

COLOR YELLOW, GRAY, BLUE

• SYSTEM SETUP

SYSTEM SETUP	
MOTOR SETUP	
PASSWORD EDIT	
ORIGIN CHECK	
CALIBRATION	: ON
PASSWORD ENABLE	: OFF
MENU TIMEOUT	: OFF
DOME ANSWER	: OFF
PRESET FOCUS	: AUTO
SAVE AND EXIT(ESC TO CANCEL)	

CALIBRATION ON (Auto origin check), OFF

PASSWORD ENABLE ON (requires the password to enter menu), OFF

MENU TIMEOUT ON (5 minutes), OFF (always menu display)

DOME ANSWER ON, OFF (no acknowledge command from the dome)
This option is helpful to escape the collision of the command using some DVR.

PRESET FOCUS AUTO, MANUAL, ONE PUSH
This option set the default mode of the focus when you save the Preset.

MOTOR SETUP

Motor Setup menu provides the pan and tilt speed of a camera. User can set the desired speed with pushing the **Joystick** to the left or right. During operation, pressing **153** + **ON** keys will change the speed to the SLOW mode and pressing **153** + **OFF** keys will change the speed to the NORMAL mode.

Press and hold the **CTRL** key and moving the **Joystick** will operate with the TURBO speed mode.

MOTOR SETUP		
PROPORTIONAL P/T	:	ON
P/T MODE	:	NORMAL
SLOW PAN MAX	:	40
SLOW TILT MAX	:	40
NORMAL PAN MAX	:	90
NORMAL TILT MAX	:	90
TURBO PAN MAX	:	360
TURBO TILT MAX	:	100
SAVE AND EXIT(ESC TO CANCEL)		

PROPOTIONAL P/T

ON, OFF

P/T MODE

SLOW, NORMAL, TURBO

SLOW PAN Maximum speed	19° ~ 90°/second
SLOW TILT Maximum speed	19° ~ 90°/second
NORMAL PAN Maximum speed	40° ~ 360°/second
NORMAL TILT Maximum speed	40° ~ 200°/second
TURBO PAN Maximum speed	200° ~ 380°/second
TURBO TILT Maximum speed	90° ~ 300°/second

PASSWORD EDIT

PASSWORD EDIT SETUP	
(CTRL KEY)	
INPUT PASSWORD	
PASSWORD:	
A B C D E F G H I J	
K L M N O P Q R S T	
U V W X Y Z 0 1 2 3	
4 5 6 7 8 9 ()	
SAVE AND EXIT(ESC TO CANCEL)	


You can change the password with 6-digit character in this menu.

The default password is **555555**.

When the password enable is on, the input password window displays to enter the menu. At this time, move the cursor to the desired character with the **Joystick** and press the **CTRL** or **IRIS Open** key.

ORIGIN CHECK


If you find the dome in the wrong position during operation, execute this origin check and the dome camera will return to the right position after the origin check operation.

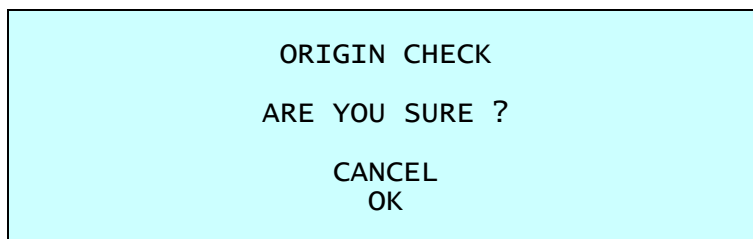

Pressing **151** + **ON** keys will execute the origin check.

• FUNCTION RUN

This Function Run menu allows you to execute the function when you use a keyboard or a DVR without the function keys (Preset, Pattern, Tour and Scan).

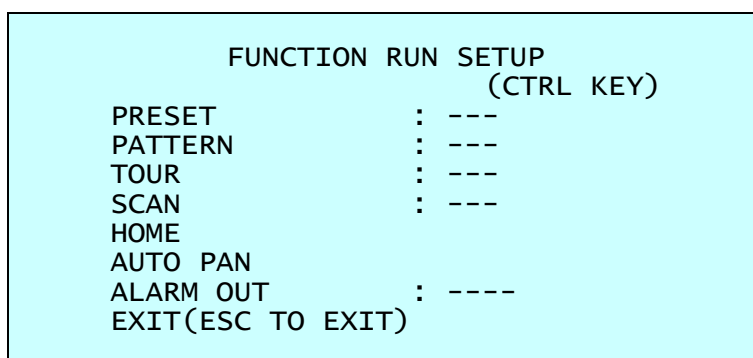

1. Select the desired Function by pushing the **Joystick** up or down.
2. Select the number by twist the **Joystick** in PRESET, PATTERN, TOUR and SCAN.
3. Press the **CTRL** or **IRIS Open** key to execute.

NOTE: To execute the function, you should save the function (PRESET, PATTERN, TOUR and SCAN) first.

- HOME

Select "HOME" and press the **CTRL** or **IRIS Open** key. The dome camera goes to the default position that it returns to after an assigned period of inactivity passes. The default position may be a Preset, Tour, Pattern or no action.

- AUTO PAN

You can execute the endless auto pan to turn in one direction continuously by selecting Auto-Pan.

- ALARM OUT

This function can operate only when the alarm out setup has the time in the alarm menu.

Ex)

```

                                ALARM OUT SETUP

OUT1    : ALARM
OUT2    : 1 MIN
EXIT(ESC TO EXIT)
```

You press the **CTRL** or **IRIS Open** key then that alarm out operates during the setting time only.

• SYSTEM INFORMATION

```

                                SYSTEM INFORMATION

CAMERA TYPE      : xxxx-Vx.xx
H/W VERSION     : Vx.xx-xxxx
ROM VERSION      : Vx.xxxxxxx
PROTOCOL         : xxxx
BAUDRATE         : 9600(NONE)

HD B/D VERSION  : Vx.xx

EXIT(ESC TO EXIT)
```

The system information provides essential information about the dome camera if service is required. This screen displays the camera type and ROM version. The information on this screen cannot be modified.

Appendix A — Specifications

30x Full-HD IR PTZ DOME HD-TVI CAMERA

Model		30x
IMAGE		
Lens		30x 4.3mm ~ 129.0mm
Angle of View		65.1° (H) ~ 2.23° (H)
Image Sensor	Type	1/2.8" SONY STARVIS CMOS sensor
	Pixels	1945 (H) x 1109 (V)
Min. Illumination		Color : 0.35 Lux @ 50IRE BW : 0.013 Lux @ 50IRE 0 Lux (IR LED ON)
Scanning Mode		Progressive Scan
Wide Dynamic Range		True WDR
Day and Night Mode		True D/N (Auto, Day, Night)
Noise Reduction		2DNR, 3DNR
Digital Zoom		16x
Exposure Control		Auto, Manual, Shutter Priority, Iris Priority
White Balance Control		Auto, Manual, Incandescent, Fluorescent, Outdoor
Back Light Compensation		Yes
Image Effect		Flip (Digital)
Shutter Speed		25/30fps : Auto (1/30,000 ~ x8 sec.), Manual 50/60fps : Auto (1/50,000 ~ x8 sec.), Manual
IR Illuminator		Synchronized IR LED & Fixed IR LED
VIDEO		
Resolution		HD-TVI : 1080p @ 25/30fps, 720p @ 25/30/50/60fps
Video Output		HD-TVI or AHD, Composite
DIS		Yes
Defog		Yes
PTZ Function		
Pan Range		360° Endless
Pan Speed		Max. 380°/sec. (Preset)
Tilt Range		-10° ~ 90°
Tilt Speed		Max. 380°/sec. (Preset)
Auto Calibration		-
Auto Scan		1 Auto Pan & 16 Auto Scans
Preset		240
Tour		8
Pattern		8
Home Function		Yes
Privacy Mask Zone		8 Programmable Zones
EXTERNAL IN/OUT		
Video HD-TVI/AHD Output		BNC Jack
Video Composite Output		BNC Jack
Alarm		4 Inputs, 2 Outputs (Terminal Block)
Control		RS-485, Baud Rate: 2400 ~ 38400 bps (Default: 9600 bps)
ID (Camera Address)		1 ~ 3999

ETC	
Operating Humidity	0 ~ 90%RH (Non-condensing)
Operating Temperature (with Heater)	-30°C ~ 65°C
Power Supply	24VDC, 24VAC
Power Consumption (with Heater)	2.6A (38.0W) @ 24VDC or 24VAC
Dimensions	216mm (Φ) x 302.5mm (H)
Net Weight	Approx. 5.3kg
Ingress Protection	IP66

* Specifications are subject to change without notice *

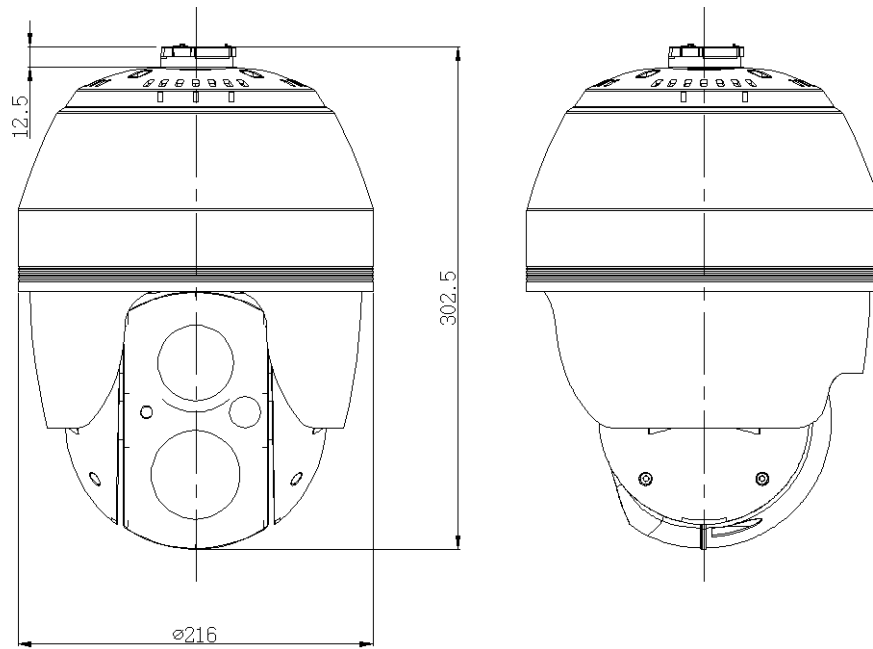


Figure – Dimension

Appendix B — Troubleshooting

If problems occur, verify the installation of the camera with the instructions in this manual and with other operating equipment. Isolate the problem to the specific piece of equipment in the system and refer to the equipment manual for further information.

Problem	Possible Solution
No video.	Verify that power is connected to all pieces of equipment in the system. Verify that the power switches are in the ON position. Check the video connections.
Poor video quality.	Check that the BNC connectors are inserted properly. Check the voltage level of the dome camera. Cable for video is shielded.
Dome cameras lose their positions.	Reset the cameras using the Dome configuration menus. Check that the dome cameras are inserted properly in the base. Check the voltage level of the dome camera.
Camera number does not match the multiplexer number.	Check the camera ID and insert the BNC cable into the proper input of the multiplexer.

PTZ Accessories

PTZ Dome - Mounting Accessories		
 Wall Mount with Junction Box • Compatible with Mini & Full size PTZ Dome • For Indoor & Outdoor PA-WMJB200	 Ceiling Mount • Compatible with Full-size PTZ Dome • For Indoor & Outdoor PA-CM200	 Parapet/Roof-top Mount • Compatible with Full-size PTZ Dome • For Indoor & Outdoor PA-PRM200
 Corner Mount Bracket • Compatible with PA-WMJB200 • For Indoor & Outdoor PA-CMB200	 Pole Mount Bracket • Compatible with PA-WMJB200 • For Indoor & Outdoor PA-PMB200	 Keyboard • LCD Display Panel • 3-axis Joystick • Jog/Shuttle CK-2000

NUVICO®

Version 15.11



30x Full-HD IR PTZ DOME HD-TVI CAMERA

Tel: 201-541-1605 Fax: 201-541-1620
Toll Free: 866-523-1700
E-mail: techsupport@nuvico.com
www.nuvico.com

The NUVICO logo is the registered trademark of NUVICO.
© Copyright 2015, NUVICO. All rights reserved.



50303969A